

# PIPE FITTINGS



## Features

• When involved in factory maintenance or plant installation, its often difficult to be certain whichsize of fittings with be required. Our pipe fittings provide a cost effective solution to this problem

## Specifications

Material	Nickel-plated Brass
Threads	BSPT, BSPP, NPT, Metric threads
Pressure	(See tube)
Fluid	Compressed air
Temperature	(See data of used tubing)

### STRAIGHT MALE

**PSM**



Thread(R) -Thread(R)		Thread(NPT) -Thread(NPT)	
PSM 01-01	PSM 06-04	PSM N01-N01	PSM N06-N04
PSM 02-02	PSM 06-03	PSM N02-N02	PSM N06-N03
PSM 02-01	PSM 06-02	PSM N02-N01	PSM N06-N02
PSM 03-03	PSM 08-08	PSM N03-N03	PSM N08-N08
PSM 03-02	PSM 08-06	PSM N03-N02	PSM N08-N06
PSM 03-01	PSM 08-04	PSM N03-N01	PSM N08-N04
PSM 04-04	PSM 08-03	PSM N04-N04	PSM N08-N03
PSM 04-03		PSM N04-N03	
PSM 04-02		PSM N04-N02	
PSM 04-01		PSM N04-N01	
PSM 06-06		PSM N06-N06	

### EQUAL MALE STUD ELBOW

**PEL**



Thread(R)	Thread(NPT)
PEL 01	PEL N01
PEL 02	PEL N02
PEL 03	PEL N03
PEL 04	PEL N04

### STRAIGHT FEMALE

**PSF**



Thread(R) -Thread(R)		Thread(NPT) -Thread(NPT)	
PSF 01-01	PSF 06-04	PSF N01-N01	PSF N06-N04
PSF 02-02	PSF 06-03	PSF N02-N02	PSF N06-N03
PSF 02-01	PSF 06-02	PSF N02-N01	PSF N06-N02
PSF 03-03	PSF 08-08	PSF N03-N03	PSF N08-N08
PSF 03-02	PSF 08-06	PSF N03-N02	PSF N08-N06
PSF 03-01	PSF 08-04	PSF N03-N01	PSF N08-N04
PSF 04-04	PSF 08-03	PSF N04-N04	PSF N08-N03
PSF 04-03		PSF N04-N03	
PSF 04-02		PSF N04-N02	
PSF 04-01		PSF N04-N01	
PSF 06-06		PSF N06-N06	

### EQUAL FEMALE STUD ELBOW

**PFL**



Thread(R)	Thread(NPT)
PFL 01	PFL N01
PFL 02	PFL N02
PFL 03	PFL N03
PFL 04	PFL N04

### STRAIGHT MALE TO FEMALE

**PSMF**



Thread(R) -Thread(R)		Thread(NPT) -Thread(NPT)	
PSMF 01-01	PSMF 06-04	PSMF N01-N01	PSMF N06-N04
PSMF 02-02	PSMF 06-03	PSMF N02-N02	PSMF N06-N03
PSMF 02-01	PSMF 06-02	PSMF N02-N01	PSMF N06-N02
PSMF 03-03	PSMF 08-08	PSMF N03-N03	PSMF N08-N08
PSMF 03-02	PSMF 08-06	PSMF N03-N02	PSMF N08-N06
PSMF 03-01	PSMF 08-04	PSMF N03-N01	PSMF N08-N04
PSMF 04-04	PSMF 08-03	PSMF N04-N04	PSMF N08-N03
PSMF 04-03		PSMF N04-N03	
PSMF 04-02		PSMF N04-N02	
PSMF 04-01		PSMF N04-N01	
PSMF 06-06		PSMF N06-N06	

### EQUAL FEMALE, MALE ELBOW

**PEFL**



Thread(R)	Thread(NPT)
PEFL 01	PEFL N01
PEFL 02	PEFL N02
PEFL 03	PEFL N03
PEFL 04	PEFL N04

### MALE STUD BRANCH TEE

**PMT**



Thread(R)	Thread(NPT)
PMT 01	PMT N01
PMT 02	PMT N02
PMT 03	PMT N03
PMT 04	PMT N04

### MALE TEE

**PSMT**



Thread(R)	Thread(NPT)
PSMT 01	PSMT N01
PSMT 02	PSMT N02
PSMT 03	PSMT N03
PSMT 04	PSMT N04

# PIPE FITTINGS



### MALE TO FEMALE TEE

**PSFT**



Thread(R)	Thread(NPT)
PSFT 01	PSFT N01
PSFT 02	PSFT N02
PSFT 03	PSFT N03
PSFT 04	PSFT N04

### EQUAL FEMALE TEE

**PFT**



Thread(R)	Thread(NPT)
PFT 01	PFT N01
PFT 02	PFT N02
PFT 03	PFT N03
PFT 04	PFT N04

### MALE RUN TEE

**PMST**



Thread(R)	Thread(NPT)
PMST 01	PMST N01
PMST 02	PMST N02
PMST 03	PMST N03
PMST 04	PMST N04

### EQUAL FEMALE CROSS

**PFC**



Thread(R)	Thread(NPT)
PFC 01	PFC N01
PFC 02	PFC N02
PFC 03	PFC N03
PFC 04	PFC N04

### EQUAL FEMALE TO MALE CROSS

**PFCT**



Thread(R)	Thread(NPT)
PFCT 01	PFCT N01
PFCT 02	PFCT N02
PFCT 03	PFCT N03
PFCT 04	PFCT N04

### FEMALE Y

**PYF**



Thread(R)	Thread(NPT)
PYF 01	PYF N01
PYF 02	PYF N02
PYF 03	PYF N03
PYF 04	PYF N04

### FEMALE TO MALE Y

**PYT**



Thread(R)	Thread(NPT)
PYT 01	PYT N01
PYT 02	PYT N02
PYT 03	PYT N03
PYT 04	PYT N04

### PLUG


**PO**



Thread(R)	Thread(NPT)
PO 01	PO N01
PO 02	PO N02
PO 03	PO N03
PO 04	PO N04

### PLUG

**POH**

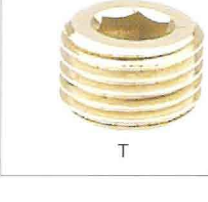

Thread(R)	Thread(NPT)
POH 01	POH N01
POH 02	POH N02
POH 03	POH N03
POH 04	POH N04

### MALE BARB

**PHTM**



Tube(Metric) - Thread(R)		Tube(Metric) - Thread(G)		Tube(Inch) - Thread(NPT)	
PHTM04-01	PHTM10-02	PHTM04-G01	PHTM10-G02	PHTM1/8-N01	PHTM5/16-N02
PHTM04-02	PHTM10-03	PHTM04-G02	PHTM10-G03	PHTM5/32-N01	PHTM5/16-N03
PHTM05-01	PHTM10-04	PHTM05-G01	PHTM10-G04	PHTM5/32-N02	PHTM5/16-N04
PHTM05-02	PHTM12-01	PHTM05-G02	PHTM12-G01	PHTM3/16-N01	PHTM3/8-N01
PHTM06-01	PHTM12-02	PHTM06-G01	PHTM12-G02	PHTM3/16-N02	PHTM3/8-N02
PHTM06-02	PHTM12-03	PHTM06-G02	PHTM12-G03	PHTM3/16-N03	PHTM3/8-N03
PHTM08-01	PHTM12-04	PHTM08-G01	PHTM12-G04	PHTM1/4-U10	PHTM3/8-N04
PHTM08-02	PHTM14-03	PHTM08-G02	PHTM14-G03	PHTM1/4-N01	PHTM1/2-N02
PHTM08-03	PHTM14-04	PHTM08-G03	PHTM14-G04	PHTM1/4-N02	PHTM1/2-N03
PHTM08-04	PHTM16-03	PHTM08-G04	PHTM16-G03	PHTM1/4-N03	PHTM1/2-N04
PHTM10-01	PHTM16-04	PHTM10-G01	PHTM16-G04	PHTM5/16-N01	

### FEMALE BARB

**PHTF**



Tube(Metric) - Thread(R)		Tube(Metric) - Thread(G)		Tube(Inch) - Thread(NPT)	
PHTF04-01	PHTF10-02	PHTF04-G01	PHTF10-G02	PHTF1/8-N01	PHTF5/16-N02
PHTF04-02	PHTF10-03	PHTF04-G02	PHTF10-G03	PHTF5/32-N01	PHTF5/16-N03
PHTF05-01	PHTF10-04	PHTF05-G01	PHTF10-G04	PHTF5/32-N02	PHTF5/16-N04
PHTF05-02	PHTF12-01	PHTF05-G02	PHTF12-G01	PHTF3/16-N01	PHTF3/8-N01
PHTF06-01	PHTF12-02	PHTF06-G01	PHTF12-G02	PHTF3/16-N02	PHTF3/8-N02
PHTF06-02	PHTF12-03	PHTF06-G02	PHTF12-G03	PHTF3/16-N03	PHTF3/8-N03
PHTF08-01	PHTF12-04	PHTF08-G01	PHTF12-G04	PHTF1/4-U10	PHTF3/8-N04
PHTF08-02	PHTF14-03	PHTF08-G02	PHTF14-G03	PHTF1/4-N01	PHTF1/2-N02
PHTF08-03	PHTF14-04	PHTF08-G03	PHTF14-G04	PHTF1/4-N02	PHTF1/2-N03
PHTF08-04	PHTF16-03	PHTF08-G04	PHTF16-G03	PHTF1/4-N03	PHTF1/2-N04
PHTF10-01	PHTF16-04	PHTF10-G01	PHTF16-G04	PHTF5/16-N01	

# PIPE FITTINGS



### MALE ELBOW BARB

**PLB**



Tube(Metric) - Thread(R)		Tube(Metric) - Thread(G)		Tube(Inch) - Thread(NPT)	
PLB04-01	PLB10-02	PLB04-G01	PLB10-G02	PLB1/8-N01	PLB5/16-N02
PLB04-02	PLB10-03	PLB04-G02	PLB10-G03	PLB5/32-N01	PLB5/16-N03
PLB05-01	PLB10-04	PLB05-G01	PLB10-G04	PLB5/32-N02	PLB5/16-N04
PLB05-02	PLB12-01	PLB05-G02	PLB12-G01	PLB3/16-N01	PLB3/8-N01
PLB06-01	PLB12-02	PLB06-G01	PLB12-G02	PLB3/16-N02	PLB3/8-N02
PLB06-02	PLB12-03	PLB06-G02	PLB12-G03	PLB3/16-N03	PLB3/8-N03
PLB08-01	PLB12-04	PLB08-G01	PLB12-G04	PLB1/4-U10	PLB3/8-N04
PLB08-02	PLB14-03	PLB08-G02	PLB14-G03	PLB1/4-N01	PLB1/2-N02
PLB08-03	PLB14-04	PLB08-G03	PLB14-G04	PLB1/4-N02	PLB1/2-N03
PLB08-04	PLB16-03	PLB08-G04	PLB16-G03	PLB1/4-N03	PLB1/2-N04
PLB10-01	PLB16-04	PLB10-G01	PLB16-G04	PLB5/16-N01	

### IN & OUT THREAD

**PZ**



Thread(R) - Thread(R)	Thread(NPT)-Thread(NPT)
PZ02-01	PZ N02-N01
PZ03-02	PZ N03-N02
PZ04-01	PZ N04-N01
PZ04-02	PZ N04-N02
PZ04-03	PZ N04-N03
PZ06-02	PZ N06-N02
PZ06-03	PZ N06-N03
PZ06-04	PZ N06-N04

### REDUCE MALE TO FEMALE

**PRMF**



Thread(R) - Thread(R)	Thread(NPT)-Thread(NPT)
PRMF02-01	PRMF N02-N01
PRMF03-01	PRMF N03-N01
PRMF03-02	PRMF N03-N02
PRMF04-01	PRMF N04-N01
PRMF04-02	PRMF N04-N02
PRMF04-03	PRMF N04-N03
PRMF06-02	PRMF N06-N02
PRMF06-03	PRMF N06-N03
PRMF06-04	PRMF N06-N04

### BARB UNION

**PBB**



||
||
||